



1. INTRODUCTION

Follow this care and maintenance advice to ensure the ongoing appearance and performance of Thermory cladding.

2. CLEANING

Only simple, biannual cleaning is required to maintain Thermory cladding. Use a soft-bristled brush, water or water with a mild detergent to wash the cladding. Using other chemicals, cleaning products or stiff-bristled brushes could damage the cladding.

3. INSPECTIONS AND MAINTENANCE

Thermory cladding should be coated with a penetrating oil coating after installation and recoated once a year. This will preserve the natural characteristics of the timber and maintain an attractive appearance.

Regularly check flashings, cappings, penetrations and junctions to ensure the integrity of the external envelope. If deterioration has occurred, repair or replace flashings or reapply sealant.

Refer to <http://www.maintainingmyhome.org.nz/maintenance-guides/exterior-wall-maintenance-guide/> for detailed advice published by BRANZ about maintenance of external cladding. Refer to <http://www.maintainingmyhome.org.nz/maintenance-guides/exterior-wall-maintenance-guide/> for detailed advice published by BRANZ about maintenance of external cladding.

4. USEFUL LINKS

For further information refer to www.timberline.co.nz.

Other relevant documents include:

This guide must be read in conjunction with:

- › Product pass™ documents¹
 - Thermory Ash cladding system pass™ or
 - Thermory Nordic Pine cladding system pass™
- › Technical Documents²
 - Thermory cladding installation guide
 - Thermory Ash cladding system warranty
 - Thermory Nordic Pine cladding system warranty.

1 See www.thebuildingbusiness.co.nz/timberline-pass-landing for controlled versions.

2 See www.timberline.co.nz/resources for controlled versions.